


# BA Configuration Guide

## CMS Thin Client Image Version 3.0


**Base OS : Ubuntu 10.04**  
**Kernel : 2.6.32-38-generic**

**Date Modified : 23/11/2015**


1. Take the mouse cursor to the extreme top. This will bring down the menu bar.
2. Click on the "thinclient" icon (as shown by the arrow in the screenshot below) to bring the system into the thinclient mode. It is always advisable to configure the system in "thinclient mode".

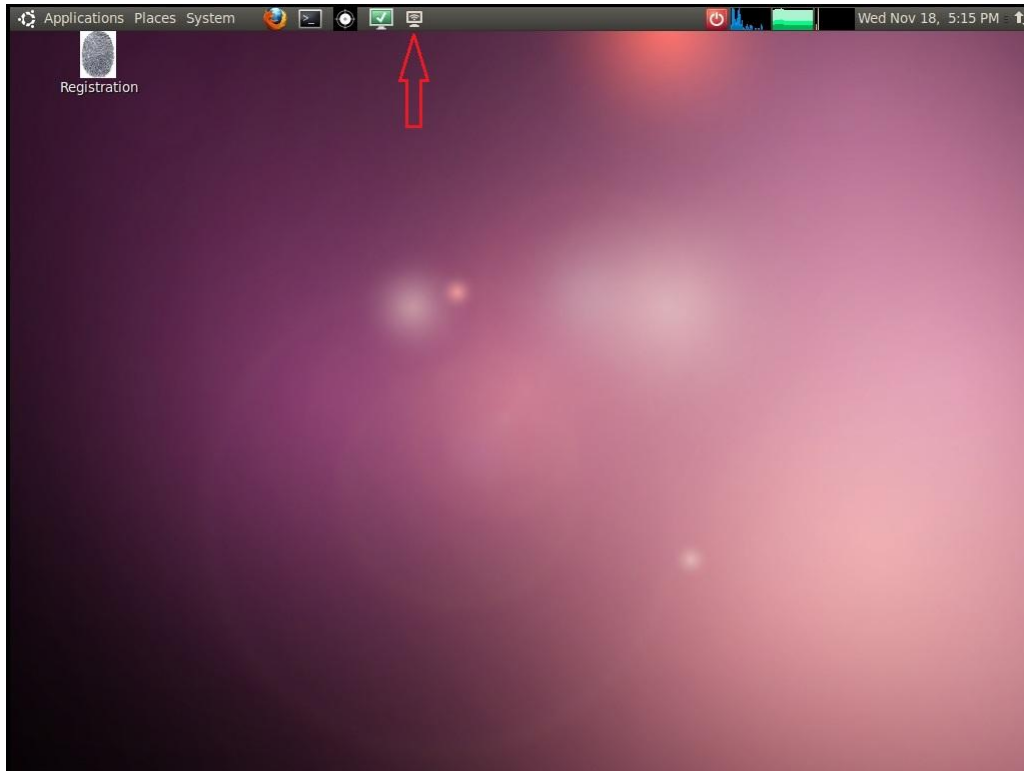


3. Now again take the mouse cursor to the extreme top and click on firefox icon (as shown by the arrow in the screenshot below) in the menu bar.

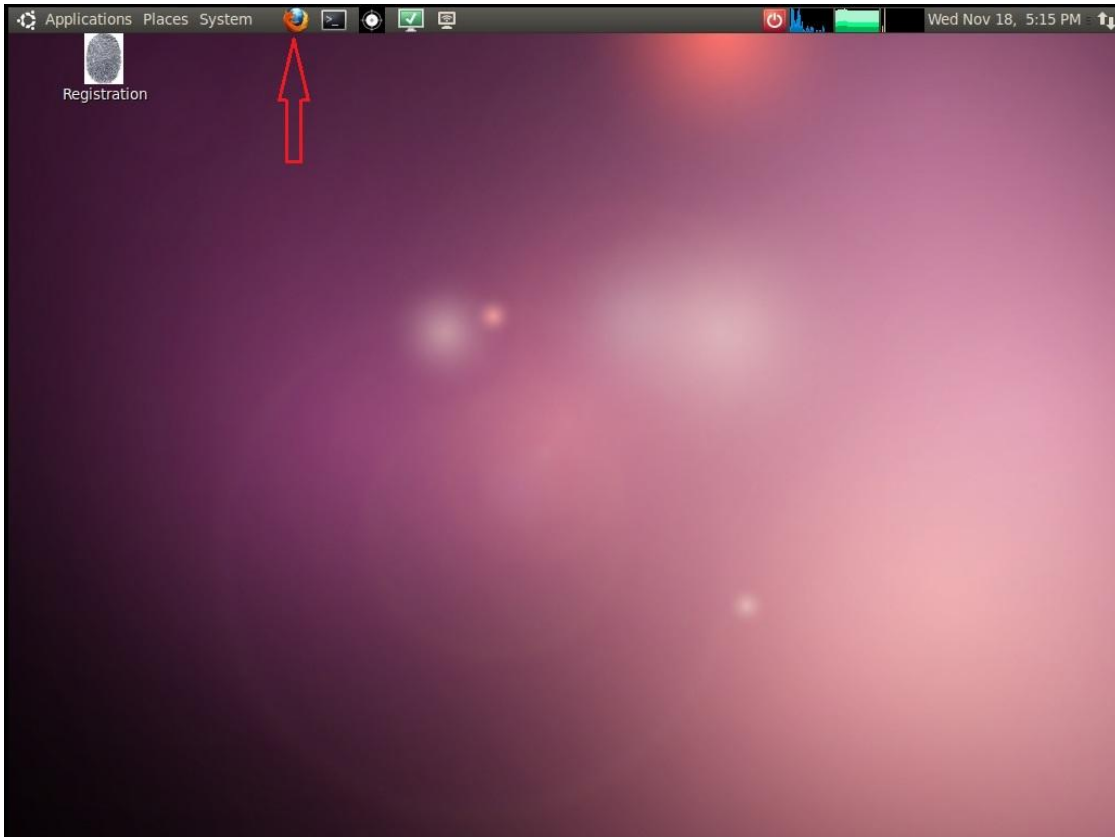


4. Now click the "**Admin**" bookmark (as shown by the arrow in the screenshot below). This will open the Admin Console.

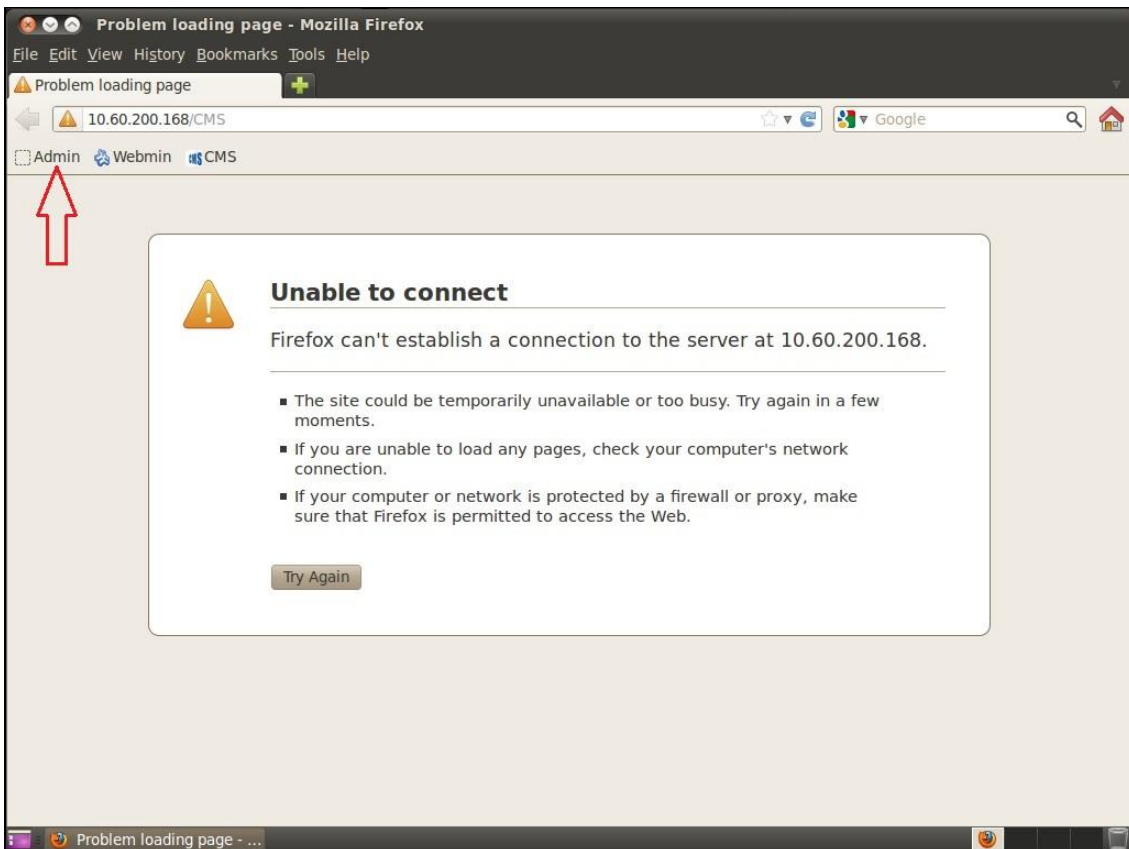


5. Enter "**babio**" in the username and Enter the default password, which is "**123**"

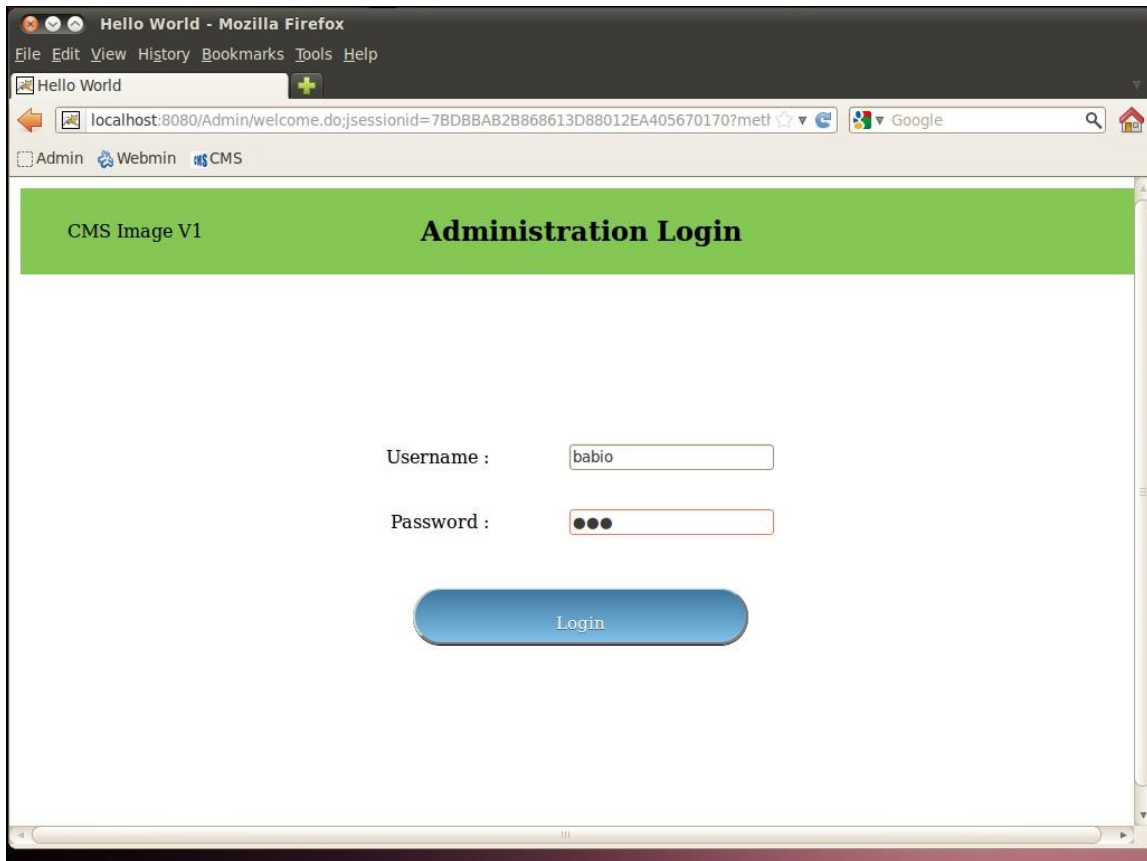


6. Now as you can see we have four options in the **Admin Console** namely
  - a. "Biometric Configuration"
  - b. "Breath Analyser Configuration"
  - c. "Change Password" and
  - d. "Network Configuration".

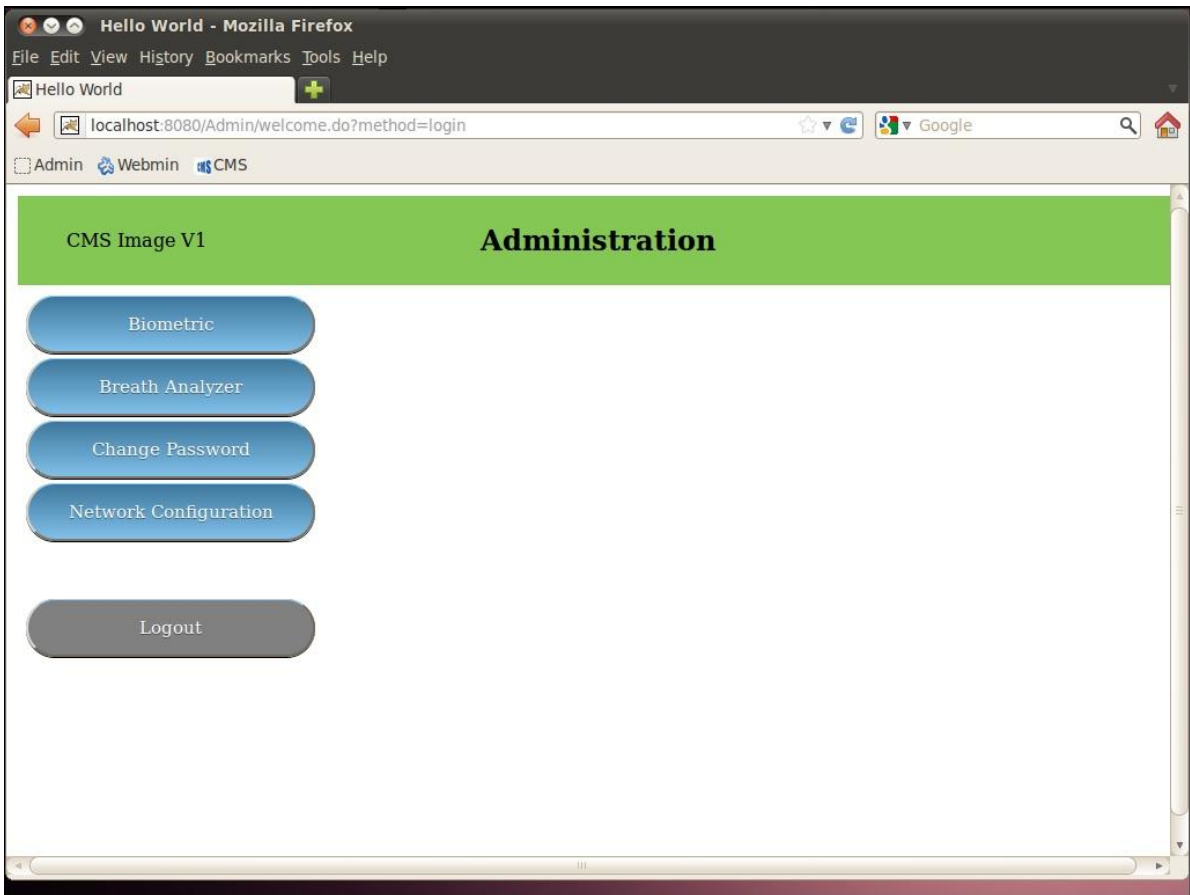


7. Go to Breath Analyser Configuration.
8. In the first option you can select to **enable or disable** the BA functionality.

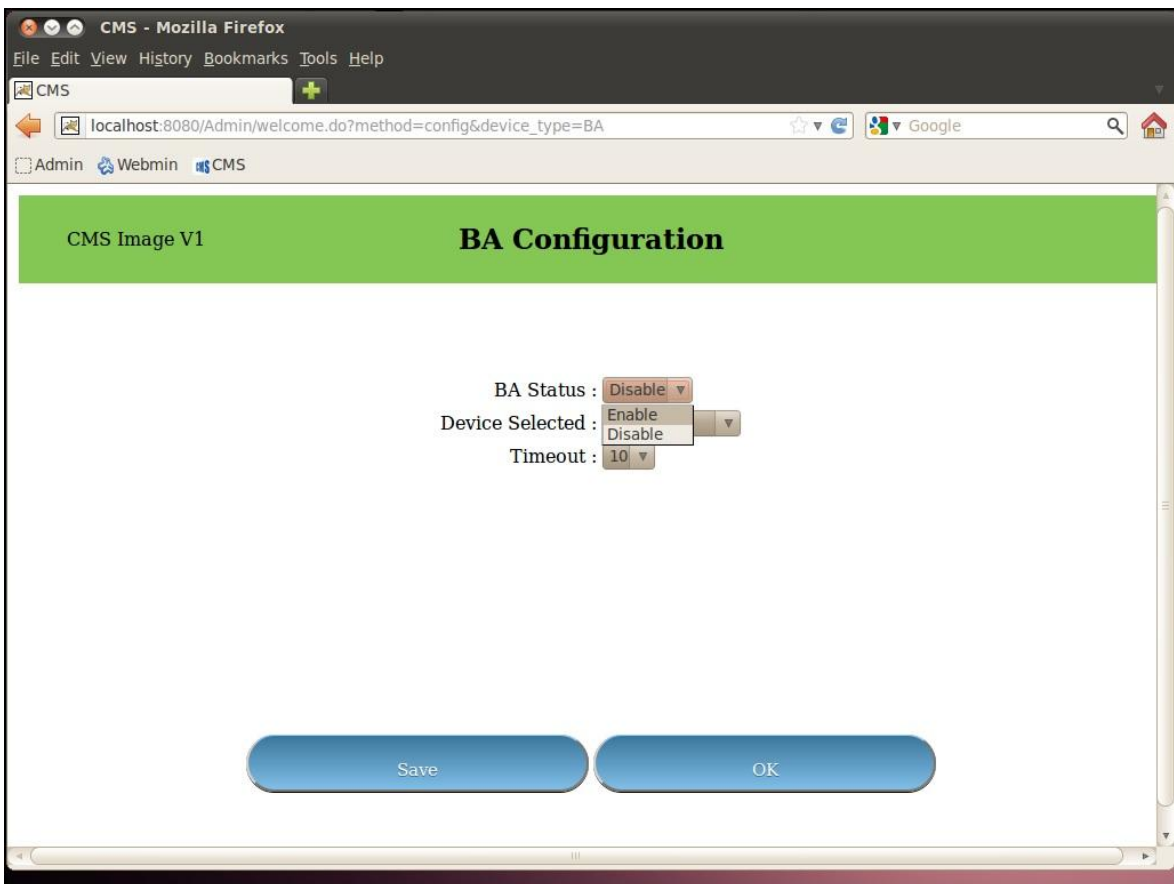


9. If you choose to enable the BA functionality, you will have to select the particular model of device attached to your KIOSK.

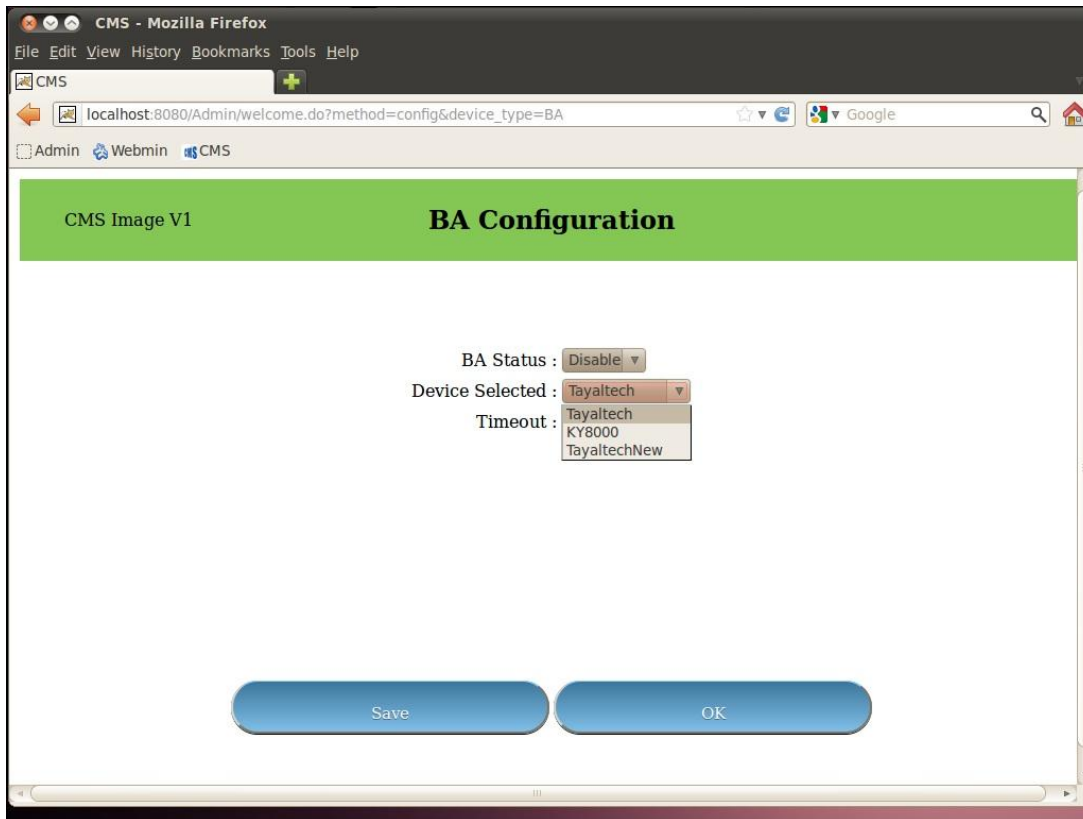


10. In the third option you can select the **timeout** value for the device. This value is in seconds and it means that for how many seconds the BA device will wait for the crew to start blowing into the BA device after the crew has started the BA process. If the crew does not start blowing into the BA device within the designated timeout seconds (in this case for eg. 20 seconds) , than the device will report "timeout event " and will return to the Crew Activity page.

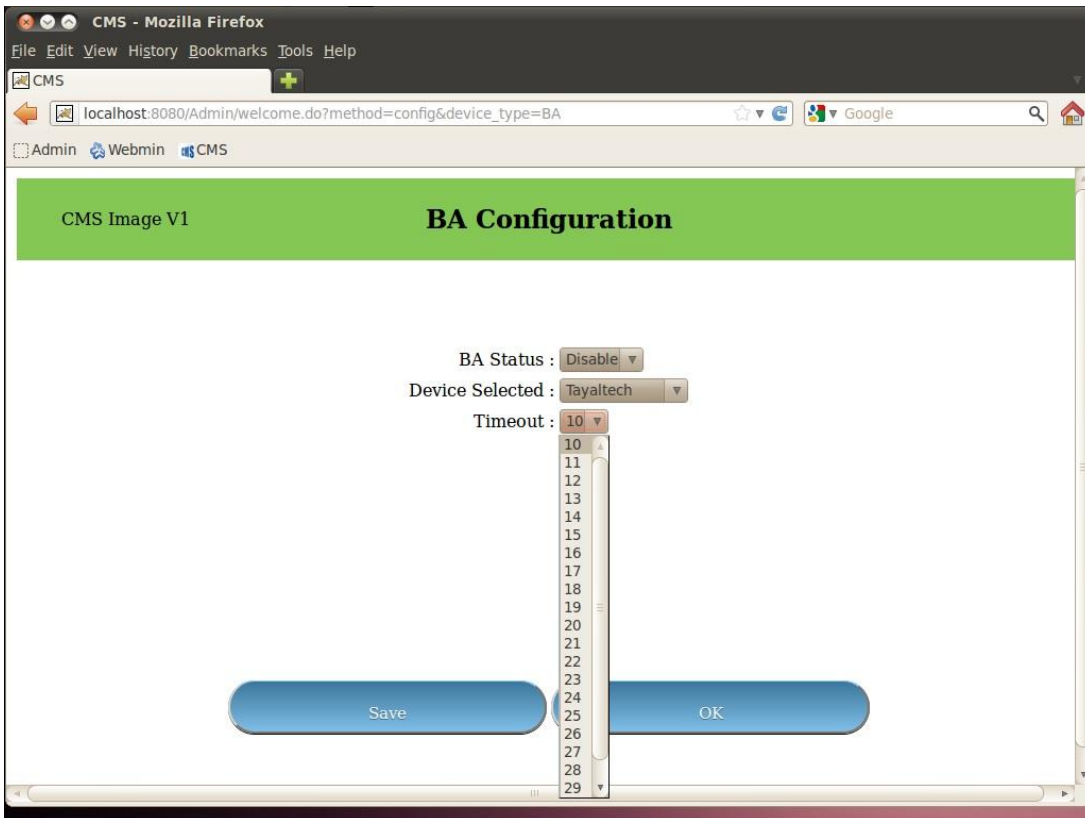


11. After selecting all the values, click on the "Save" button. You will get two success alerts saying "Configuration Saved" . Click on "OK" on both the alerts and then click on "OK" on BA Configuration page.

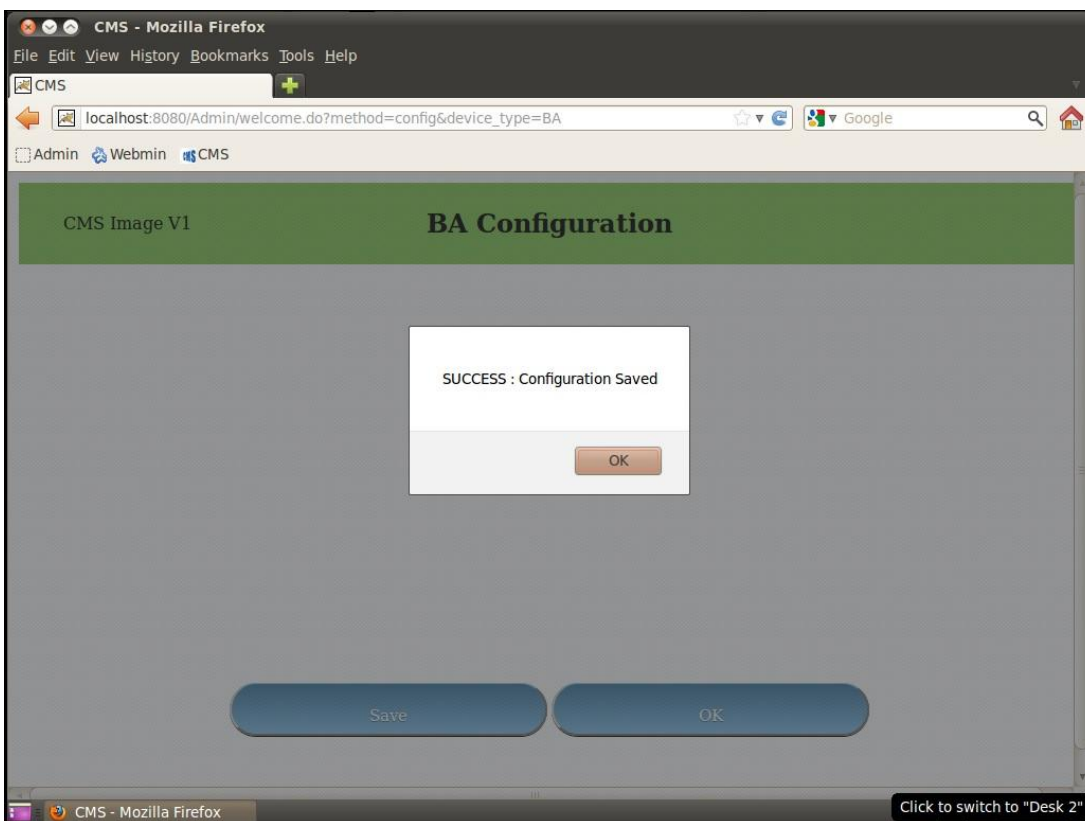

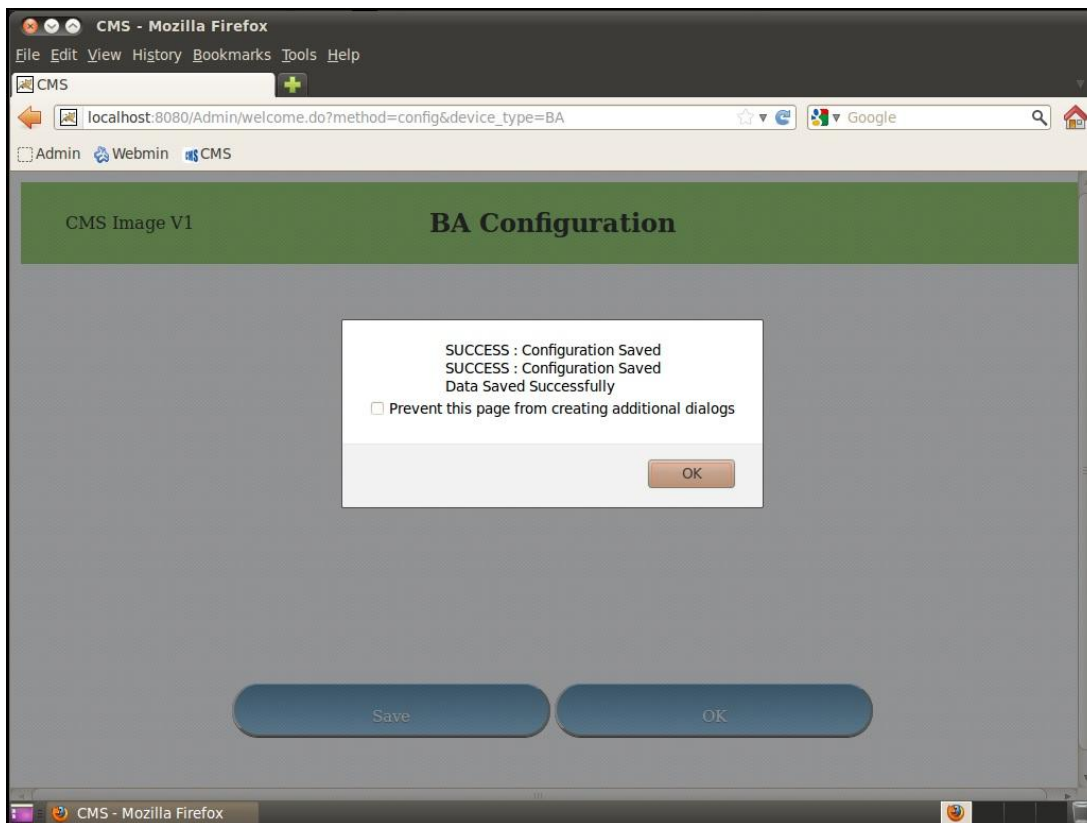

12. click on "OK"
13. Click on "Logout"
14. Now our configuration is complete and we will switch to the KIOS mode. Take the mouse cursor to the extreme top and click on the "KIOSK" icon, which will bring the thinclient into the KIOSK Mode

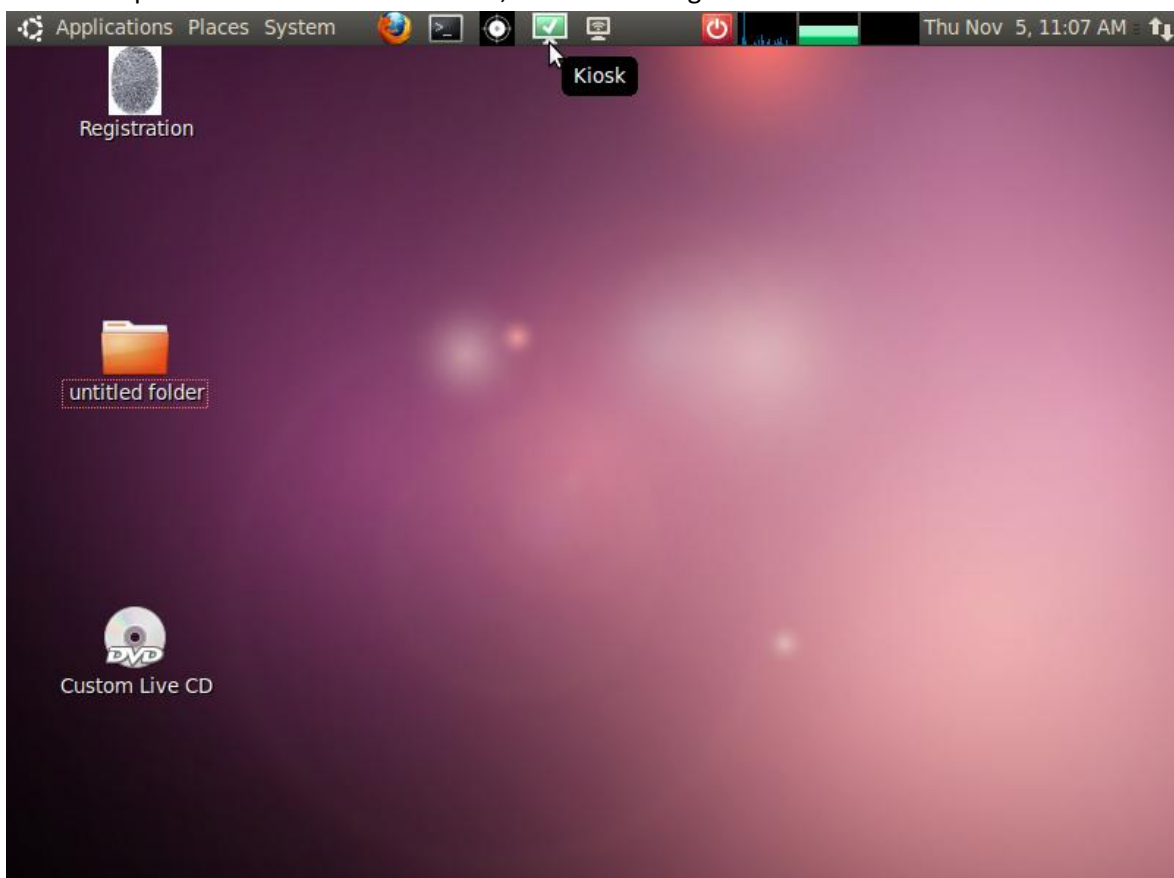



**CMS**




Crew Access **KIOSK**



WELCOME TO 'SHRI SATYENDRA KUMAR, GM-SECR' TO DBEC LOBBY.



**Awards Honour  
2008/2009**

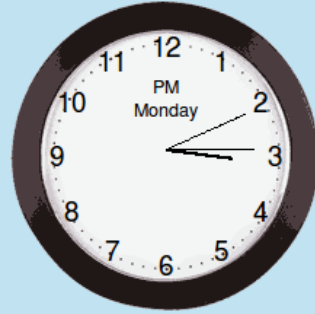

**IBM**  
**Beacon Awards  
2009 Finalist**



**ENGLISH**

हिन्दी

Thank You